


TACTILE WARNING DELINEATOR SURFACE-APPLIED INSTALLATION INSTRUCTIONS


1. Read installation instructions thoroughly before you begin.
2. Surface must be clean and free of debris before beginning. A wire brush or cup grinder may be needed to address any imperfections.
3. Place Tactile Warning Delineator (Trapezoid) on surface where it is to be installed and mark one side. (Fig. 1) **Note: A chalk line is recommended to maintain a straight installation.**

Fig. 1

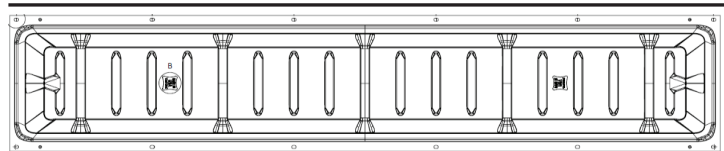

4. Remove and apply sealant to the back side of the Trapezoid. **Note: Use sealant according to manufacturers instructions.**

Fig. 2

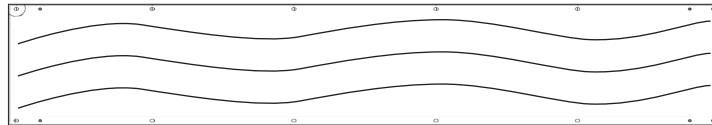


Important: When installing multiple linear Tactile Warning Delineators (Trapezoids), a 1/4" space is required.




5. Place Trapezoid in marked location and drill 2 - 1/4" x 2" minimum deep holes and insert drive pin fasteners. (Fig. 3) **Note: Do not drive pins yet as these are to keep tile in place while drilling remaining holes.**

Fig. 3

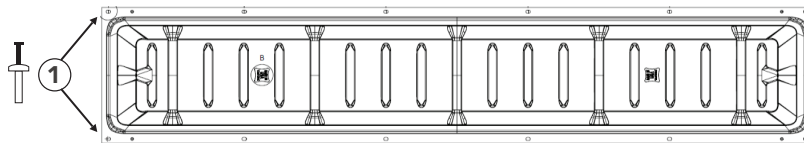


6. Continue drilling holes in all anchor locations moving across the Trapezoid. (Fig. 4) Once holes are drilled, clean the tile with a broom or blower before inserting remaining drive pins.

Fig. 4

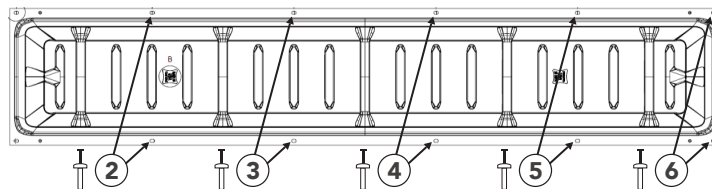


7. Insert drive pins and hammer them in moving down the Trapezoid in one direction. **Note: Hammer pin so that it is even with the head of the anchor.** (Fig. 5)

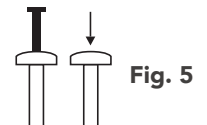

Important: If cutting is required, new holes need to be drilled and anchors inserted.

Installation is now complete

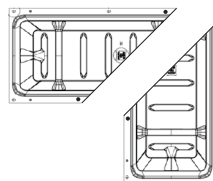

Click [here](#) for more information including an installation video tutorial. Contact us at 888-960-8897 with questions.